

347—76.4(89A) Placement of operating permits.

76.4(1) All operating permits shall be displayed in the car enclosure. Where the permit has been subjected to repeated defacing or vandalism it may be filed at the establishment and be made available upon request.

76.4(2) Escalator and moving walk operating permits shall be displayed on or near the unit for which they are issued.

76.4(3) Operating permits for dumbwaiters shall be displayed on the hoistway adjacent to the main floor door.